

### ▲ WARNING:


Series injury can result from high pressure discharge produced by pressure washers. Keep out of reach of childern.

▲ Refer to the manual for more instructions



# KARCHER


## **Connect HP hose to the unit,** position the tank to allow proper connection

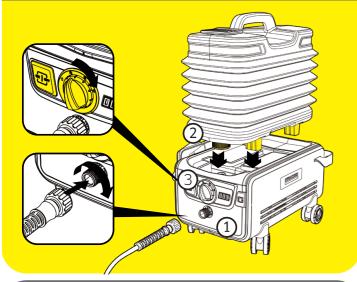


Remove the tank cap and collapse the tank for storage

Disconnect the wand and tank, turn on the machines until no water remain in the pump

To connect with water hose, 8 replace the tank connection with water inlet connector

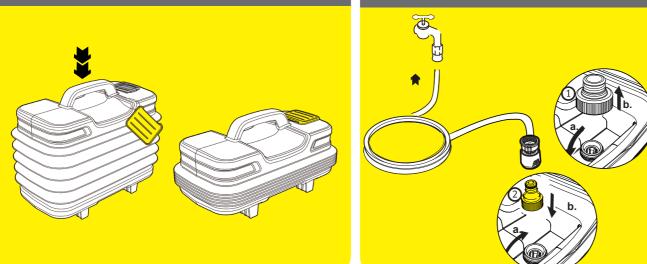

Brancher l'appareil au chargeur pour charger la batterie / Para cargar la batería, conecte el cargador al equipo Après avoir chargé, assurez-vous de fermer le couvercle después de cargar la batería. Vert clignotant: charge en cours / Luz verde parpadeante: Cargando Lumière verte allumée chargement terminé / Luz verde fija: Carga completa (L) Environ 3-4 heures Tiempo de carga de 3-4 horas Assembler la poignée pistolet / Conecte la pistola de alta presión

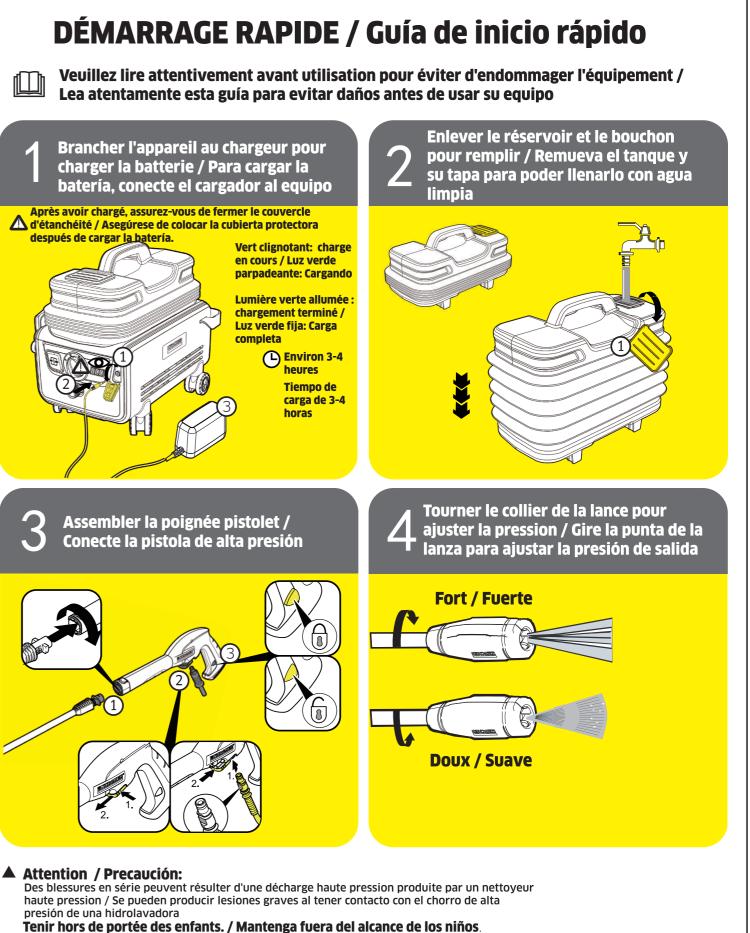

Reportez-vous au manuel pour plus d'instructions. / Consulte el manual del equipo para más información